

IMPORTANT: Please read this instruction manual carefully before using the stroller and save it for future reference.

Failure to follow the instructions contained in this manual may affect your child's safety.

WARNINGS

- TO AVOID INJURY OR DEATH:
- DO NOT LEAVE CHILDREN UNATTENDED.
- USE THE HARNESS AT ALL TIMES.
- ALWAYS APPLY THE BRAKE WHENEVER THE STROLLER IS STATIONARY.
- DO NOT CARRY EXTRA CHILDREN OR BAGS IN THIS STROLLER.
- ALWAYS MAKE SURE ALL LOCKING DEVICES ARE PROPERLY ENGAGED BEFORE USE.
- ALWAYS USE THE CROTCH STRAP OF THE HARNESS IN COMBINATION WITH THE WAIST AND SHOULDER BELT.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.
- ENSURE THAT YOUR CHILD IS KEPT WAY WHEN UNFOLDING AND FOLDING THIS PRODUCT.
- MAKES SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT LET YOUR CHILD PLAY WITH THIS PRODUCT.
- WARNING: The stroller is suitable for children from 6 month and up to a maximum weight of 15kg. Do not use this stroller for infants less than 6 months old.
- The maximum authorized load for the shipping basket is 2 kg.
- Applicable age: 7-36 months, the maximum load is not more than 15 kg.

- Hanging items or loads to the handlebar might impair stroller stability.
- This product is not suitable for running or skating.
- When folded, make sure the stroller is stored in a place where it does not risk to fall over a child.
- Before ascending or descending escalators or stairs, remove child from seat and fold the stroller.
- Keep the stroller away from open fire, exposed flame, heaters and other sources of strong heat.
- It is recommended to maintenance and clean moving parts periodically in order to check correct functioning.
- Periodically make sure that locking mechanisms function properly and that they did not suffer any damage, e.g. Following a shock.
- The stroller has been approved in accordance with GB14748-2006.

CARE AND MAINTENANCE

- When cleaning your stroller, use a non-toxic, non-abrasive cleaner. Mix a solution of water with a small amount of a mild, non-toxic detergent. Apply to the stroller frame with a damp cloth. Never use a strong detergents or solvents.
- The fabric parts may be machine washed (maximum temperature 30°C). Never use strong detergents or bleach.
- If you need to put your stroller in storage for any period of time, do not store in a damp or hot environment. Allow air flow around the stroller and do not stack anything on it.
- In case of rain, use the rain cover. Let the stroller dry before folding in and storing it.

IMPORTANTE: Por favor lea este manual de instrucciones cuidadosamente antes de usar el cochecito y guárdelo para futura referencia.

No seguir correctamente las instrucciones contenidas en este manual puede afectar la seguridad de su hijo.

ADVERTENCIAS

PARA EVITAR LESIONES O MUERTE:

NO DEJAR A LOS NIÑOS SIN ATENCIÓN

USAR EL ARNÉS TODO EL TIEMPO

SIEMPRE APLICAR EL FRENO CUANDO EL COCHE ESTÁ ESTACIONADO

NO LLEVAR NIÑOS EXTRA O EQUIPAJE EN EL COCHECITO

SIEMPRE ASEGÚRESE DE QUE LOS DISPOSITIVOS DE BLOQUEO FUERON ACTIVADOS

ANTES DEL USO

SIEMPRE USE EL CIERRE DEL ARNÉS EN COMBINACIÓN CON EL CINTURÓN DE LA CINTURA Y LOS HOMBROS

CUANDO NO ESTÉ EN USO, DESCONECTAR LOS ENGANCHES DE HOMBRO DE LA CINTURA AJUSTAR Y ABROCHAR

ASEGÚRESE DE QUE SU NIÑO ESTÁ LEJOS DEL COCHECITO AL CERRAR O ABRIR EL MISMO
ASEGÚRESE QUE LOS NIÑOS ESTÁN LIBRES DE PARTES MÓVILES AL AJUSTAR EL COCHECITO

NO PERMITA A LOS NIÑOS JUGAR CON ESTE PRODUCTO

ADVERTENCIA: Este cochecito es útil para niños de entre 6 meses y un peso de 15kg. No use este cochecito con niños menores a 6 meses.

El máximo peso del canasto portaobjetos es de 2 kg.

Edad de uso: 7-36 meses, la carga máxima es no más de 15kg.

Colgar cosas o cargas al manillar puede desestabilizar al cochecito.

Este producto no es útil para correr o patinar.

Cuando esté cerrado, asegúrese de que el cochecito está guardado en un lugar donde no pueda caer sobre un niño.

Antes de subir o bajar escaleras, saque al niño del asiento y cierre el cochecito.

Mantenga al cochecito lejos de fuego, llamas, calentadores y otras fuentes de calor.

Es recomendado mantener y limpiar las partes móviles periódicamente para asegurar el correcto funcionamiento.

Periódicamente asegúrese de que los mecanismos de cierre funcionan apropiadamente y que no sufrieron ningún daño, por ejemplo un golpe.

El cochecito fue aprobado de acuerdo a GB14748-2006.

CUIDADO Y MANTENIMIENTO

Al limpiar su cochecito, use una sustancia no tóxica, no abrasiva. Mezcle una solución de agua con una cantidad pequeña de detergente. Aplique al cuadro del cochecito con un trapo húmedo. Nunca use detergentes fuertes o solventes.

Las partes de tela pueden ser lavadas en máquina (temperatura máxima 30°C). Nunca use detergentes fuertes.

Si necesita guardar su cochecito por cualquier período de tiempo, no lo guarde en un ambiente caliente. Permita el flujo de aire alrededor del cochecito y no lo apile.

En caso de lluvia, use el cobertor. Permítale al cochecito secarse antes de plegarlo y guardarlo.





A



B

 
 


7




8



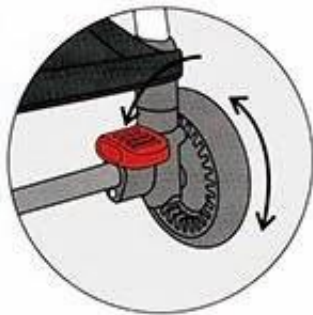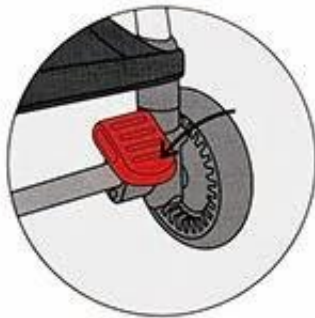

bellunoTM
baby

 
.trento.

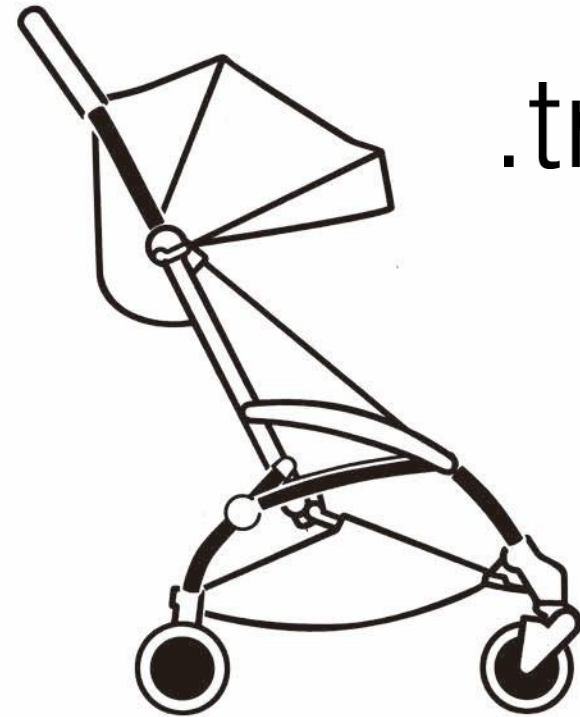

MANUALS

bellunoTM
baby

 .trento.

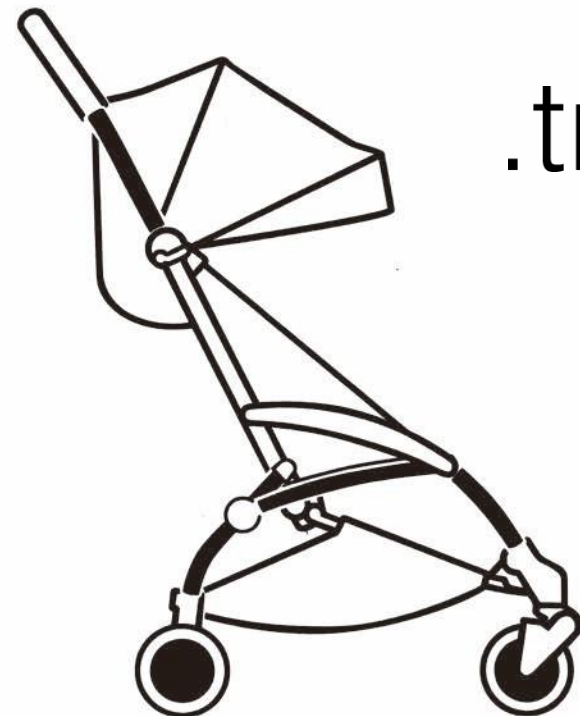

MANUALS